

AVR182: Zero Cross Detector

APPLICATION NOTE


Introduction

One of the many issues with developing modern applications is to keep the spikes and EMI at a minimum, especially when switching AC mains in and out. Most of today's new applications are controlled by one or more microcontrollers and this gives the possibility to prevent this noise in a simple and cost efficient way.

Noise produced during switching is dependent on the amplitude of the AC sinus at the actual switching point. To get this noise as low as possible the ideal switching would be when the amplitude is 0 volt. The amplitude is crossing 0 volt at the sinus "zero crossing". Switching mains in and out at the zero crossing requires a way of detecting when the next crossing will be and launching a switching action at the crossing. This raises the need for a cost efficient way to detect the zero crossing. This application note explains how to do that.

Zero cross detection can also be used for other purposes, such as frequency calculation and relative phase measuring.

Figure -1. Zero Cross Detector Using AVR

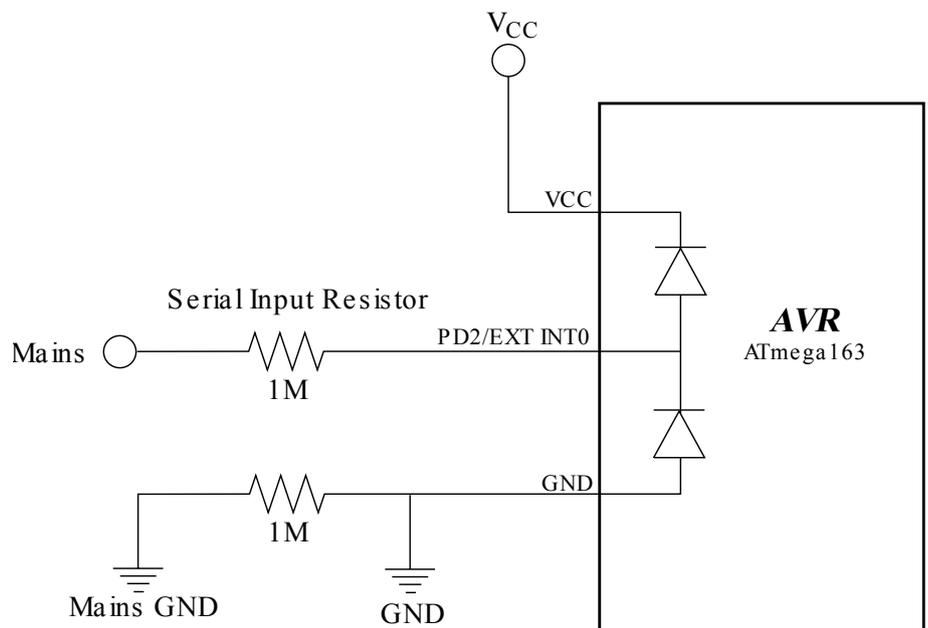

Features

- Interrupt Driven
- Modular C Source Code
- Size Efficient Code
- Accurate and Fast Detection
- A Minimum of External Components

Table of Contents

Introduction.....	1
Features.....	2
1. Application Example.....	4
1.1. Hardware.....	4
1.2. Software.....	5
2. Special Considerations.....	8
2.1. Emulators and Clamp Diodes.....	8
2.2. RC Filter and Delay Between $V_{CC}/2$ and the Actual Zero Cross.....	8
2.3. Ground Must be Symmetrical.....	8
2.4. How to Calculate a Slow Switch (Relay).....	8
3. Revision History.....	10

1. Application Example

This application note shows the user how to implement a zero cross detector with a minimum of external components. It should be noted that this solution will not give any galvanic isolation for the microcontroller against the AC mains. The zero cross sense resistor can be a way for electronic noise to get into the system.

This will not be described in this application note. See “[AVR040: EMC Design Considerations](#)” for further details on this.

The application uses ATmega16, but the code can be recompiled for any AVR® device.

The example code is written for [Atmel® START](#).

It can be downloaded from the "BROWSE EXAMPLES" entry of Atmel START for both Atmel Studio 7 and IAR™ IDE.

Double click the downloaded .atzip file and the project will be imported to Atmel Studio 7.

To import the project in IAR, refer [Atmel START in IAR](#). Select "Atmel Start Output in External Tools" → "IAR".

1.1. Hardware

To protect the device from voltages above V_{CC} and below GND, the AVR has internal clamping diodes on the I/O pins (see [Figure -1](#)). The diodes are connected from the pins to V_{CC} and GND and keep all input signals within the AVR's operating voltage (see the figure below). Any voltage higher than $V_{CC} + 0.5V$ will be forced down to $V_{CC} + 0.5V$ (0.5V is the voltage drop over the diode) and any voltage below $GND - 0.5V$ will be forced up to $GND - 0.5V$.

By adding a large resistor in series, these diodes can be used to convert a high voltage sinus signal down to a low voltage square wave signal, with amplitude within the AVR's operating voltage $\pm 0.5V$. The diodes will thus clamp the high voltage signal down to the AVR's operating voltage.

Note: Note that the series resistor and the pin input capacitance form an RC filter that will introduce a small phase difference between the square wave and the AC mains signal. The phase difference is insignificant in the current example, see section “[RC Filter and Delay Between \$V_{CC}/2\$ and the Actual Zero Cross](#)” for more details.

As the square wave signal is in phase with the AC mains, using the falling edge will tell very accurately where the zero crossing happens. By using this signal the AVR can be programmed to be a very accurate zero cross detector with a very small and interrupt-driven code.

The square wave is the mains signal with its tops cut off and will have the same voltage from $V_{CC} - 0.5V$ to $V_{CC} + 0.5V$ as the mains signal (see the figure below). When the square wave triggers the AVR's falling edge interrupt at around $V_{CC}/2$, the mains amplitude will also be at $V_{CC}/2$ and just before a zero crossing. If this is done on a falling edge the AVR will get an interrupt just before the zero crossing and will have time to start a zero crossing action at the actual crossing point. The interrupt will be triggered at around $V_{CC}/2$, as this is the middle of the AVR's logical threshold voltage.

The signal is connected to the External Interrupt 0-pin, which makes it possible to place the zero cross detection routine in an interrupt routine and make the detection fully interrupt driven. The second figure below shows an oscilloscope screen-shot of the actual input signal. Note that the Mains signal is scaled and the rising edge of the external int 0-pin is the same edge as for the Mains, because of the scaling, the Mains edge looks like it appears after the external int 0 edge.

Figure 1-1. Square Wave Input Signal on External Interrupt 0-pin


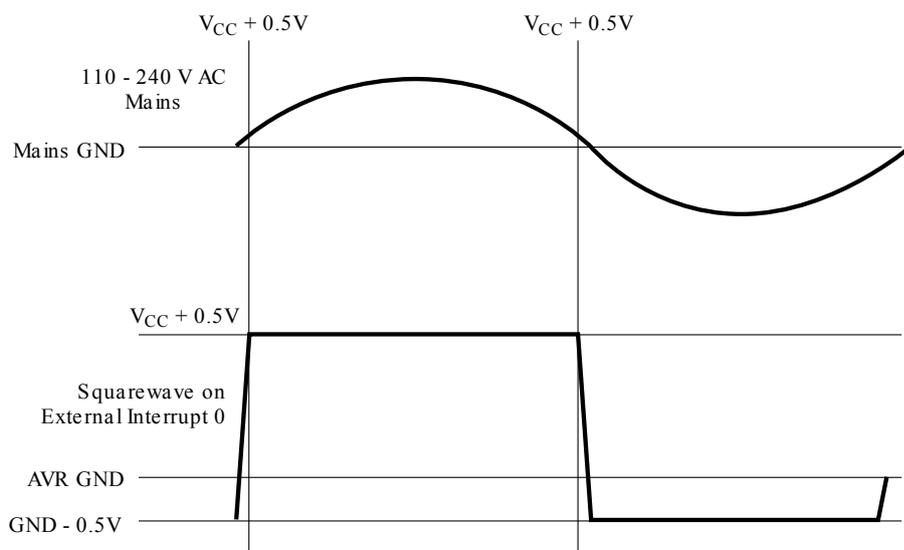


Figure 1-2. Oscilloscope Screen-shot of Square Wave Input on External Interrupt 0-pin

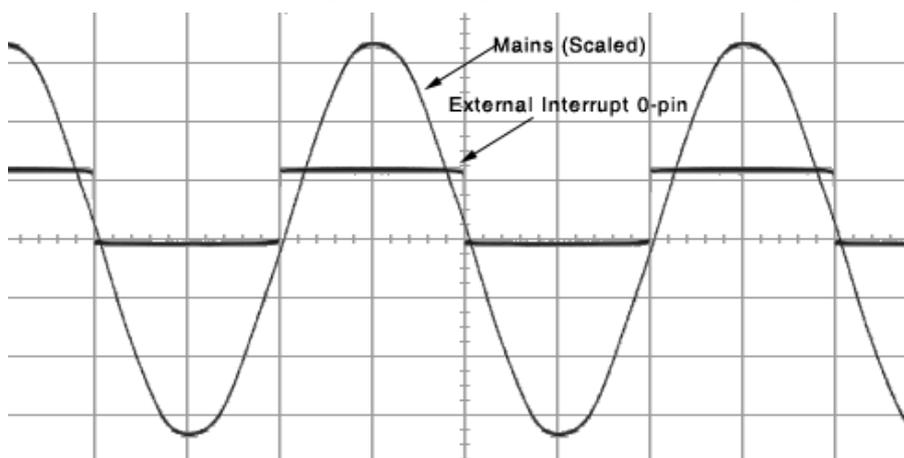

The series input resistor is a 1M Ω resistor. It is not recommended that the clamping diodes are conducting more than maximum 1mA, and 1M Ω will then allow a maximum voltage of approximately 1,000V.

Any voltage higher than 1,000V would probably be spikes or surges. The clamping diodes are able to handle spikes for a short period of time but not surges. The application note will not go into how to protect against surges, but simply recommend implementing protection against surges in the design.

Most resistors have an upper maximum voltage limit. Make sure that the resistors used in the application can handle the highest possible AC mains voltage, including high voltage spikes.

For systems with lower mains voltages the resistor value can be changed, but in general it should be able to sense 110 - 240V AC systems without any problems.

The 1M Ω resistor in series to mains GND will ensure a correct ground potential for the application.

1.2. Software

The external hardware and internal clamping diodes will make a square wave signal on the AVR's External Interrupt 0-pin. As described in the hardware section the square wave will have the same

frequency as the AC mains. The high period of the signal will be when the AC mains amplitude is above $V_{CC}/2$. This gives mains zero crossings very close to the edges of the square wave. The rising edge of the square wave is slightly after the crossing, and the falling edge is slightly before the crossing.

As the falling edge of the square wave is just before a zero crossing, the falling edge interrupt will occur so close to the actual crossing that it immediately can start the zero crossing action.

In this application example the zero crossing action will only be to set PB0 high for a short period of time and then immediately start looking for the next falling edge zero crossing. This makes it very easy to check if the zero crossing detection is correct or not. Simply connect an oscilloscope probe to the mains and another to PB0. If the detection is correct this will show PB0 going high for a short period of time at each negative edge zero crossing (see the first two figures below).

Figure 1-3. Screen-shot from Oscilloscope, Mains Input and PB0 Output


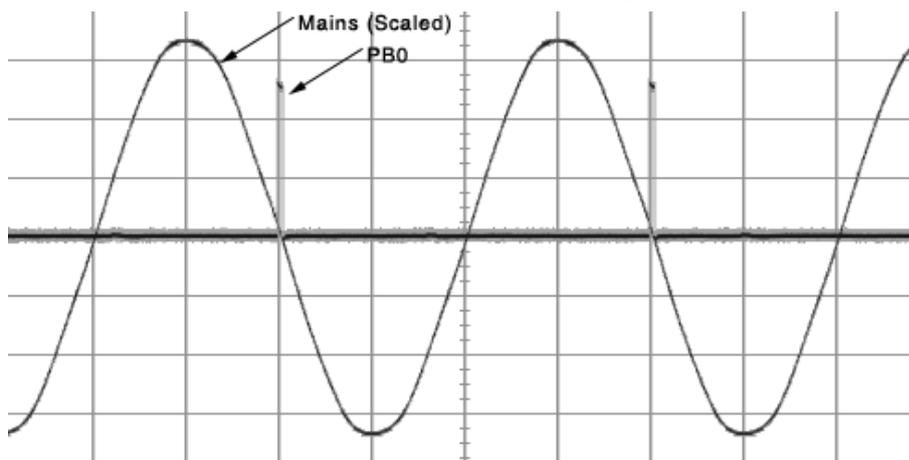


Figure 1-4. Screen-shot from Oscilloscope, Mains Input and PB0 Output

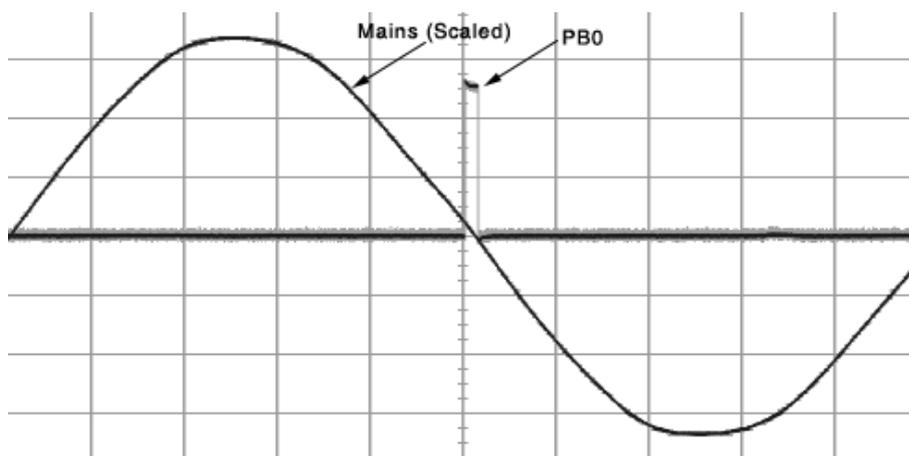


In a real application the disabling of external interrupt 0 before returning from the interrupt routine will make a single detection. To detect a new zero crossing, simply enable the falling edge interrupt again in the main program.

To make sure the interrupts are valid and not only products of spikes on the pin, there is a filter implemented in the interrupt routine. The filter samples the level on the interrupt line five times and compares the values to see if the value is stable. If the value is not the same for all the samples, the event is discarded and the routine returns to the main program waiting for a new interrupt (see the figure below).

For more details about the software, see the comments in the code.

Figure 1-5. Software Flowchart for Main Program and External Interrupt 0 Handling Routine

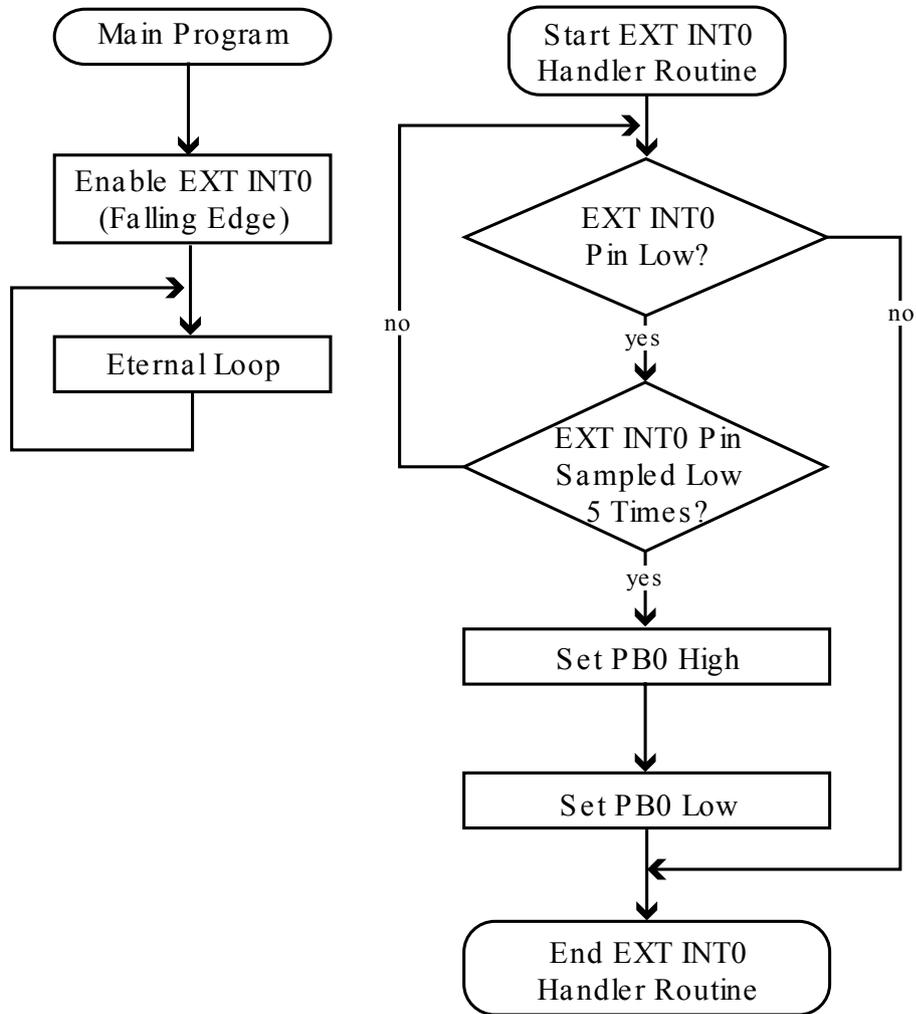

2. Special Considerations

Applying high voltages to microcontrollers increases the possibility of malfunction or injury. It is advisable to follow a few special steps as any error can cause severe damage to components, emulators, or electric shock.

2.1. Emulators and Clamp Diodes

The AVR family is set up with a complete system of emulators, but because of the nature of the PODs of some of the emulators, they are not equipped with internal clamping diodes. ICE200 and ICE40/50 are the only emulators with clamping diodes. ICE10 and ICE30 do not contain clamping diodes. By adding external clamping diodes these emulators will get the same input as the part.

To apply a high AC voltage to an emulator can cause severe damage on the equipment and care should be taken. It is recommended to use isolation transformers on the mains and galvanic separated RS-232 communication to the PC.

2.2. RC Filter and Delay Between $V_{CC}/2$ and the Actual Zero Cross

The series resistor and the input pin capacitance will form an RC filter, which will delay the response compared to the actual zero crossing.

The 1M Ω resistor together with the input capacitance on the AVR introduces a delay that brings the detection very close to the actual crossing. For other AC voltages or series resistors it is recommended to do a test with an oscilloscope to see how close the detection is to the actual crossing. This makes it very easy to check if the zero crossing detection is correct or not. Connect an oscilloscope probe to the mains and another to PB0. A correct detection will show PB0 going high for a short period of time at each falling edge zero crossing (see [Figure 1-3](#) and [Figure 1-4](#)).

If the detection is after the actual crossing, the next crossing should be targeted by adding a delay to the action. The delay should be equal to the time left before the next crossing.

The series resistor can also be modified to make the detection closer but note that the maximum current through the AVR's clamping diode should not be higher than 1mA.

2.3. Ground Must be Symmetrical

The mains ground must be symmetrical to the phases in the mains net. As the sensor is only using one phase and ground, this is necessary to detect the actual zero crossing according to the three phases in the mains net. If ground is not symmetrical it is not possible to know when the crossing is using only one phase. This can only be a problem in delta shaped mains net. Most countries, except Norway and Albania, use star shaped mains system and will not have this problem.

2.4. How to Calculate a Slow Switch (Relay)

The typical use of a zero cross detector can be to control a mains relay. As relays have a response time that will be larger than the delay from the zero cross sensing to the actual crossing one technique can be to add a delay to the handling, i.e., sense the crossing on falling edge and make the relay close on rising edge.

To do this, the response time of the relay and the frequency of the mains has to be known. These values can either be known from the manufacturer, or measured in a lab or by the AVR itself.

The measurement can be implemented into the AVR software. By using the zero cross detector it can easily sample the frequency of the signal and with some few external components it can also measure the relay response time. This will give a universal system that can adapt to almost any AC mains frequency and relay response time. It will also continue being correct even if the relay response time or frequency will change over time.

3. Revision History

Doc Rev.	Date	Comments
2508C	09/2016	New template and some minor changes
2508B	01/2004	
2508A		Initial document release

Atmel®, Atmel logo and combinations thereof, Enabling Unlimited Possibilities®, AVR®, and others are registered trademarks or trademarks of Atmel Corporation in U.S. and other countries. Other terms and product names may be trademarks of others.

DISCLAIMER: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN THE ATMEL TERMS AND CONDITIONS OF SALES LOCATED ON THE ATMEL WEBSITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS AND PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and products descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

SAFETY-CRITICAL, MILITARY, AND AUTOMOTIVE APPLICATIONS DISCLAIMER: Atmel products are not designed for and will not be used in connection with any applications where the failure of such products would reasonably be expected to result in significant personal injury or death ("Safety-Critical Applications") without an Atmel officer's specific written consent. Safety-Critical Applications include, without limitation, life support devices and systems, equipment or systems for the operation of nuclear facilities and weapons systems. Atmel products are not designed nor intended for use in military or aerospace applications or environments unless specifically designated by Atmel as military-grade. Atmel products are not designed nor intended for use in automotive applications unless specifically designated by Atmel as automotive-grade.